

Robbe Power Peak MAXAMP

Lade-Entladeströme in Abhängigkeit der Zellenzahl


Charge and discharge current depending on the number of cells

Courant de charge et de décharge en dépendance du nombre des éléments

Corrente di carica e di scarica dipendente dal numero di celle

Corriente de carga y de descarga dependiente de la cantidad de elementos

Volt	Ladestrom (A)
0-18	12
18-27	8
27-36	6
36-45	5
45	4

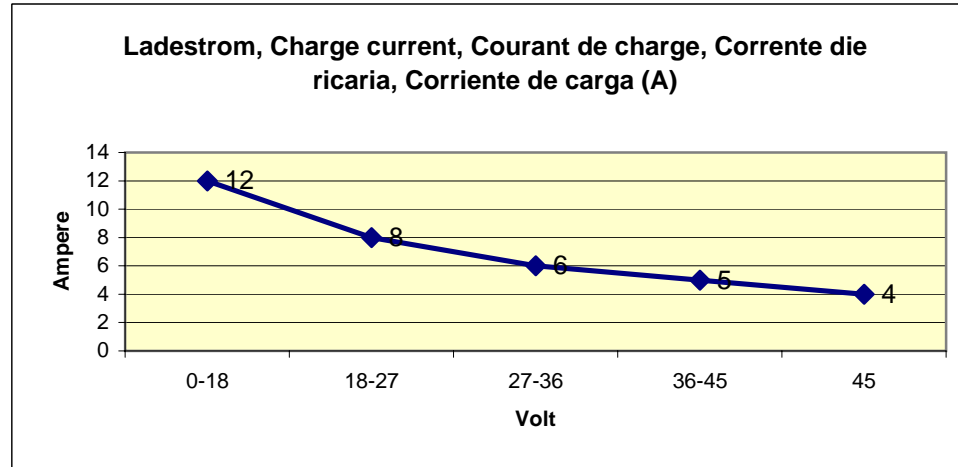

Volt	Entladestrom (A)
0,1-9	22
9-13	15
13-18	11
18-28	7
28-40	5
40-50	4

